

PLEASE READ BEFORE FITTING WARNING

Before you remove the glass from the packaging make sure you have a flat clean area slightly larger than the glass with something soft underneath to lay the glass on.

All our splashbacks are made from toughened glass and are heat resistant, but where the splashback is to be fitted behind a gas hob, the minimum distance between the nearest burner and the glass splashback must not be less than 100mm. Toughened glass is susceptible to breakage if dropped on a corner or edge. To avoid the risk of breakage, do not stand the glass up on its edge without something soft to protect the edges.

Do not attempt to cut, drill or adjust the glass, doing so will cause the glass to shatter.

DO NOT REST THE BACK OF THE GLASS ON ANY SHARP OR UNEVEN SURFACES PRIOR TO FITTING AS THIS WILL DAMAGE THE IMAGE.

Before fitting your new glass splashback(s), please ensure that the wall surface is clean and level. Slightly uneven surfaces may be corrected by using additional adhesive silicone. The glass should be adhered to a secure and permanent surface like a plastered wall or plywood. If the wall is powdery you may need to seal it with PVA first and then wait for it to dry before adhering the glass.

CONTACT US

If you have an enquiry, our staff are always available to help and work with you.

P: 01922 715 147

E: sales@glaast.co.uk

A: Glaast

Rehouse Industrial Estate

Middlemore Lane West

Aldridge

Walsall

WS9 8EA

www.glaast.co.uk



GLAAST




A GUIDE FOR FITTING YOUR SPLASHBACK

FITTING INSTRUCTIONS

Tools required: A silicone gun. B. Suction handling pads (optional for very large panels only).


1. Remove the glass splashback from the packaging and place it image or colour side down, on a prepared flat, clean, soft surface.

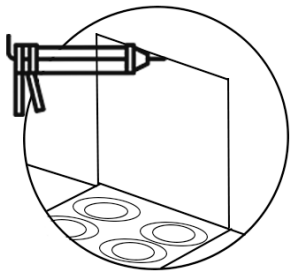


2. Now that the glass is on a flat clean surface, using our neutral cure, solvent free silicone adhesive; you can start applying equally sized proportions (roughly 20mm about 100mm apart). Be careful not to put any silicone too close to the edge as this may squeeze over the edge of the glass.

3. Place the glass splashback into position on the wall and gently press into place.

4. Leave the glass splashback for at least 16 hours to allow the silicone adhesive to set.

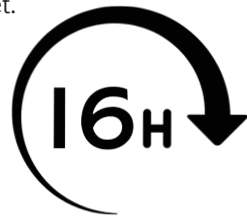


5. Ensure there is enough silicone adhesive in place between the worktop and the glass to avoid water ingress.

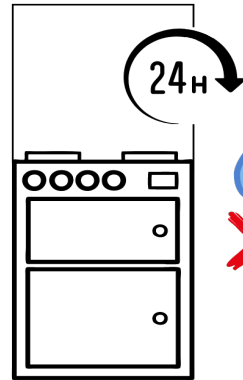

6. Avoid touching or wetting the glass splashback for 24 hours to allow the silicone adhesive to set.

7. When fixing to stainless steel, it is essential that the surface is clean and free of any contaminants- it is also advisable to key the surface to allow for perfect bonding of the two materials.

ADHESIVE

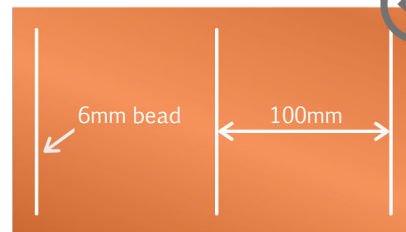

CARE INSTRUCTIONS

Please adhere to these care instructions to ensure quality of your glass is maintained,

1. Use microfibre cloths – they clean spillages without the need for harsh chemicals.
2. Toughened glass is very strong, and it is difficult to break even with high impact. However, we recommend the glass to be treated with care.
3. Never use abrasive polishing pads or material (e.g. wax) on the glass surface.

